




Kodak EasyShare LS743 Battery Door Replacement

Replacing the battery door

Written By: Odessa

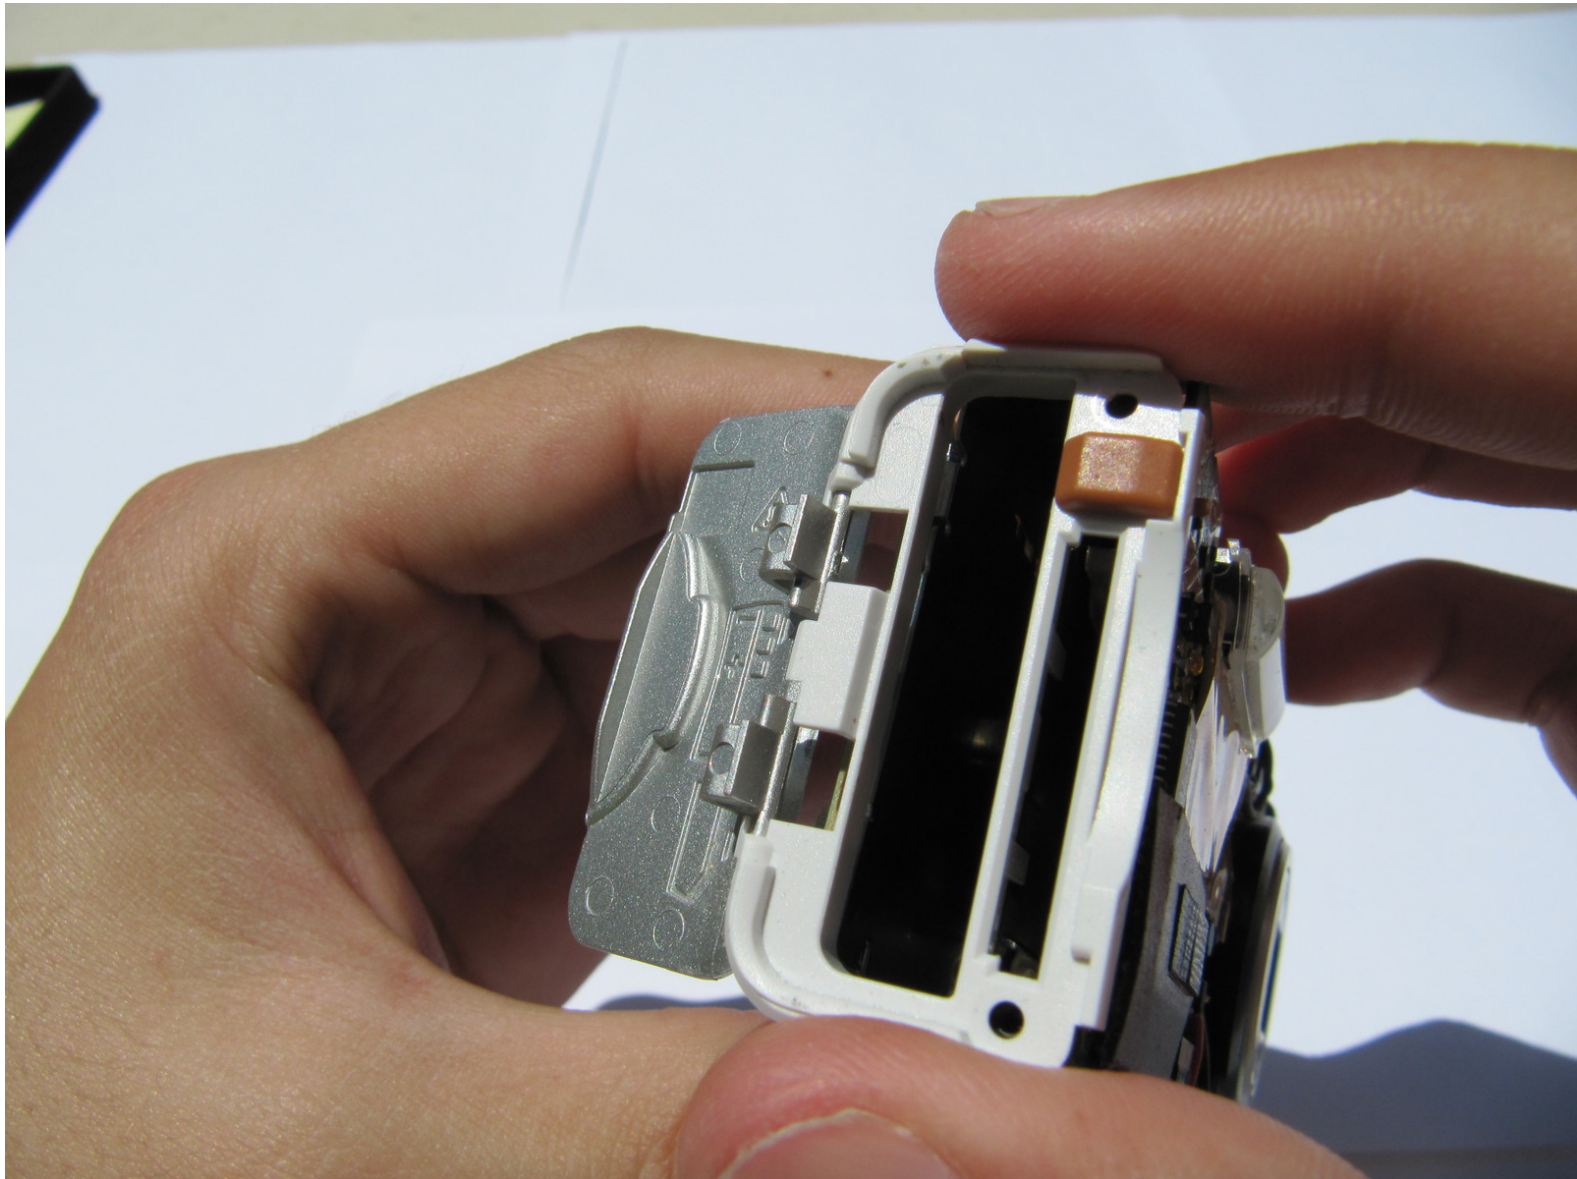

INTRODUCTION

This is a step-by-step guide in replacing the battery door



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Open the battery cover.

Step 2

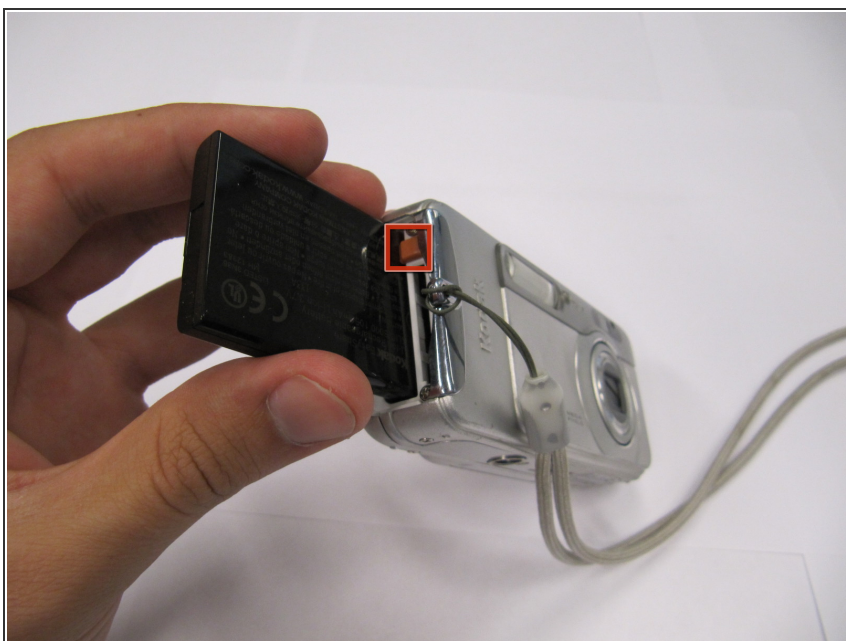


- Slide the orange latch sideways to eject the battery.
- Remove the battery.

Step 3 — Kodak EasyShare LS743 Camera Case Disassembly




- Remove 7 screws.
 - 1 (6.25 mm) screw located on the top right corner, next to the view screen.
 - 4 (4.45mm) screws on the bottom of the camera.
 - 2 (2.95mm) screws on the left side of the camera.

Step 4

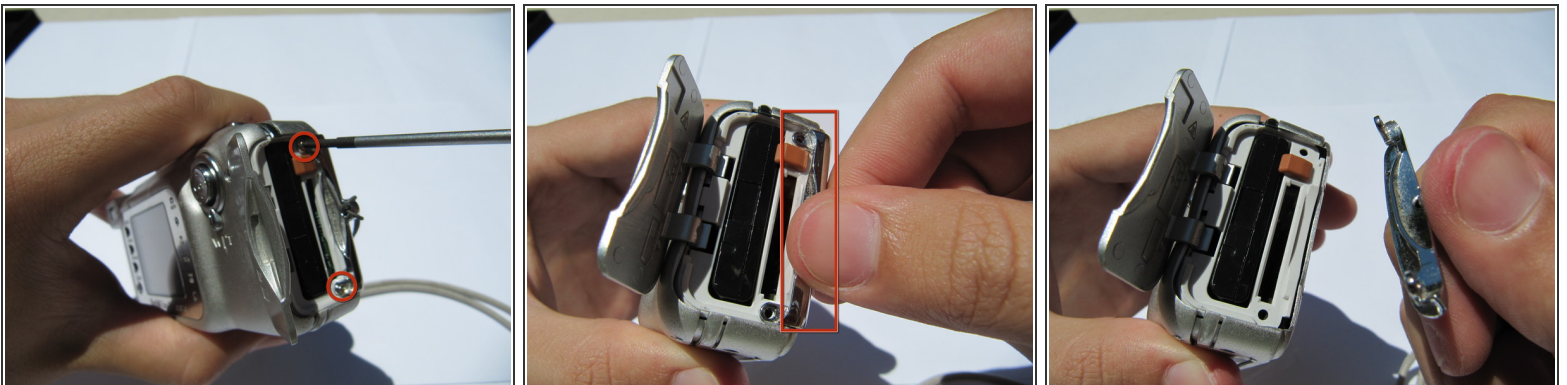



- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.

Step 5

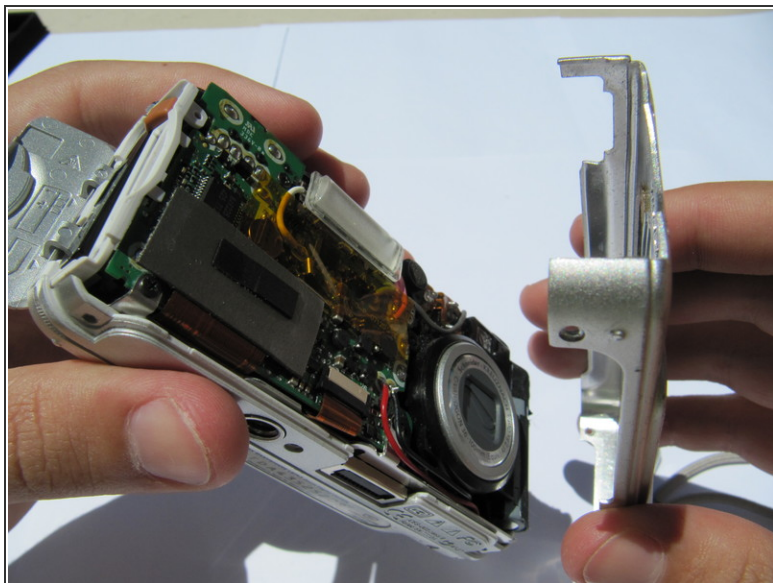

- Remove the rear camera casing.
- Remove the front casing.

Step 6 — Battery Door

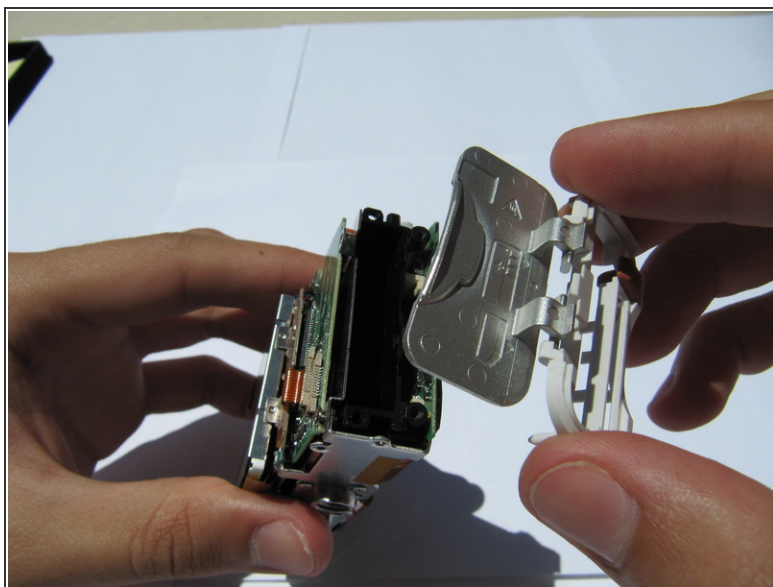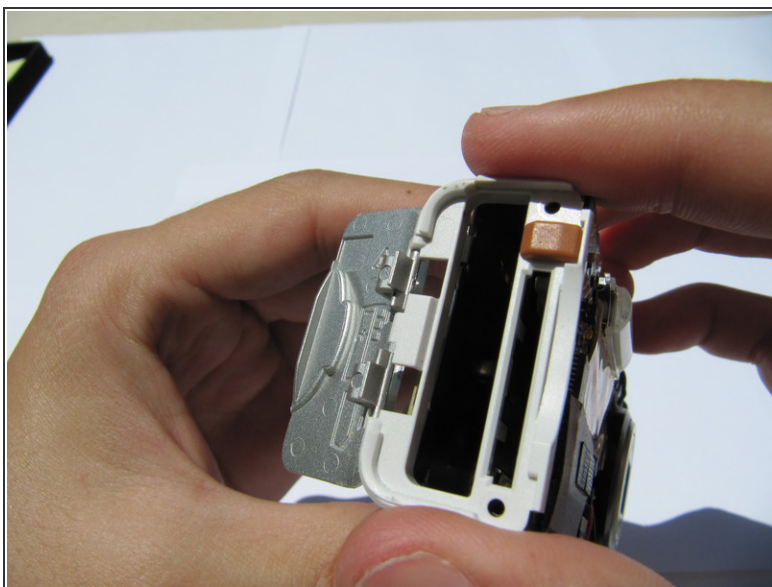

- Remove loose battery door.

To reassemble your device, follow these instructions in reverse order.

